

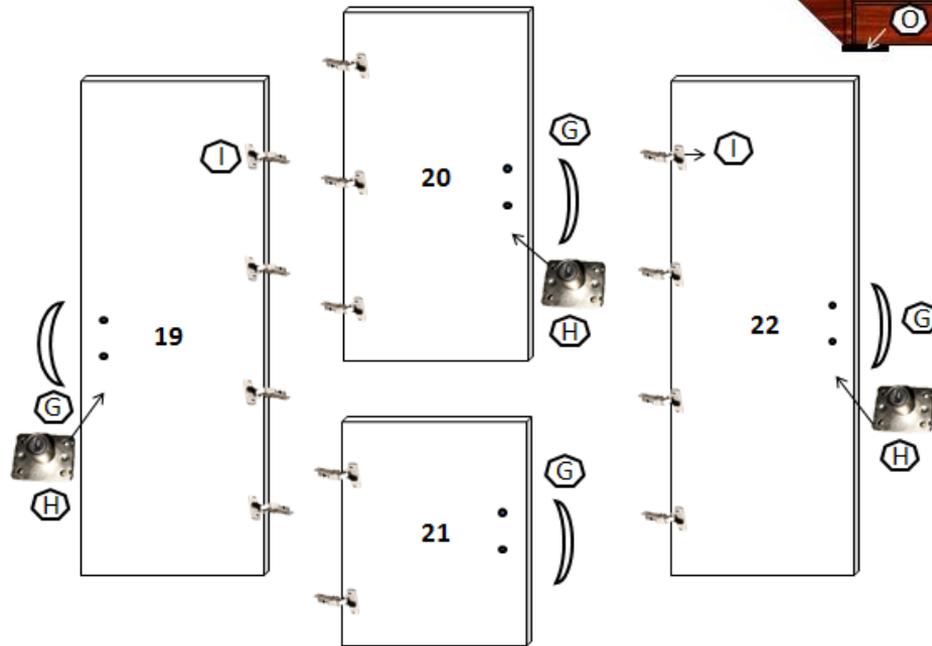
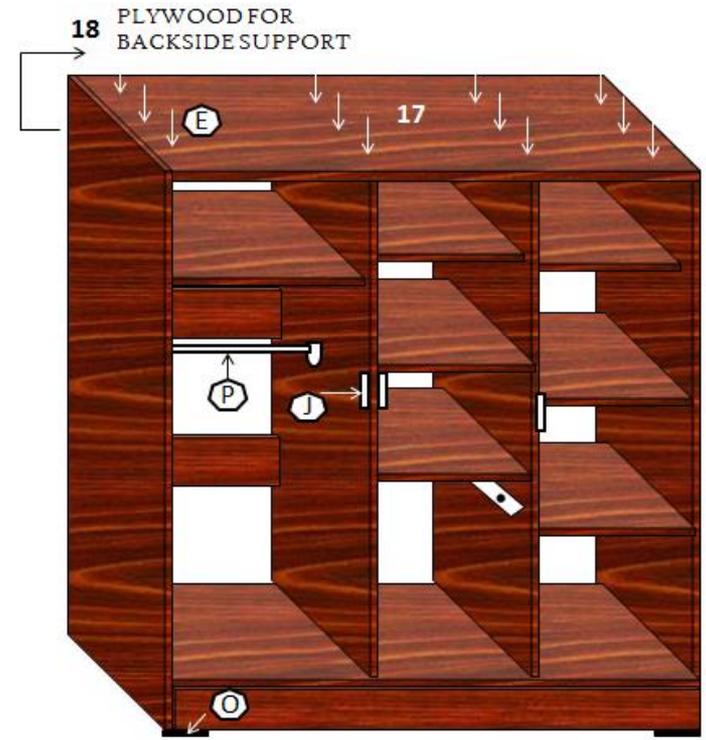


**NAD FURNITURE**

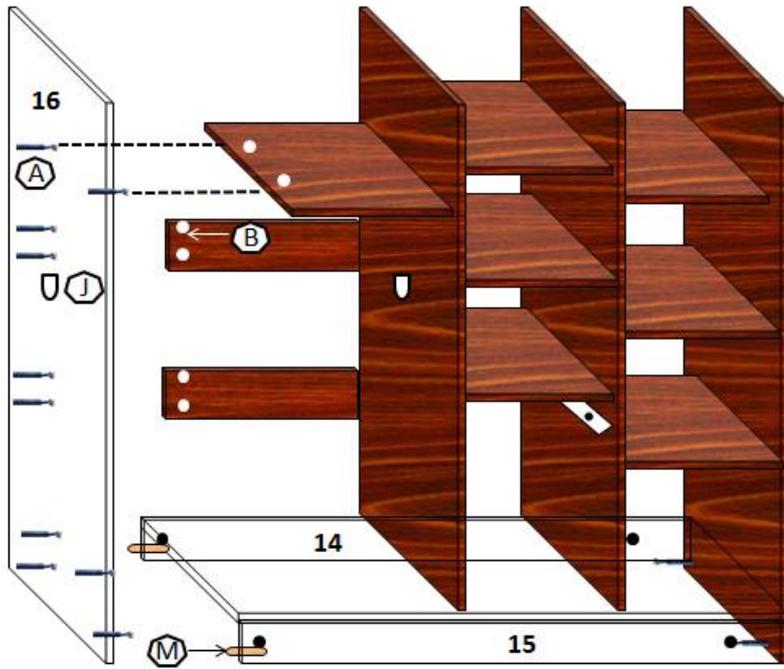


**DRAWER ASSEMBLY**

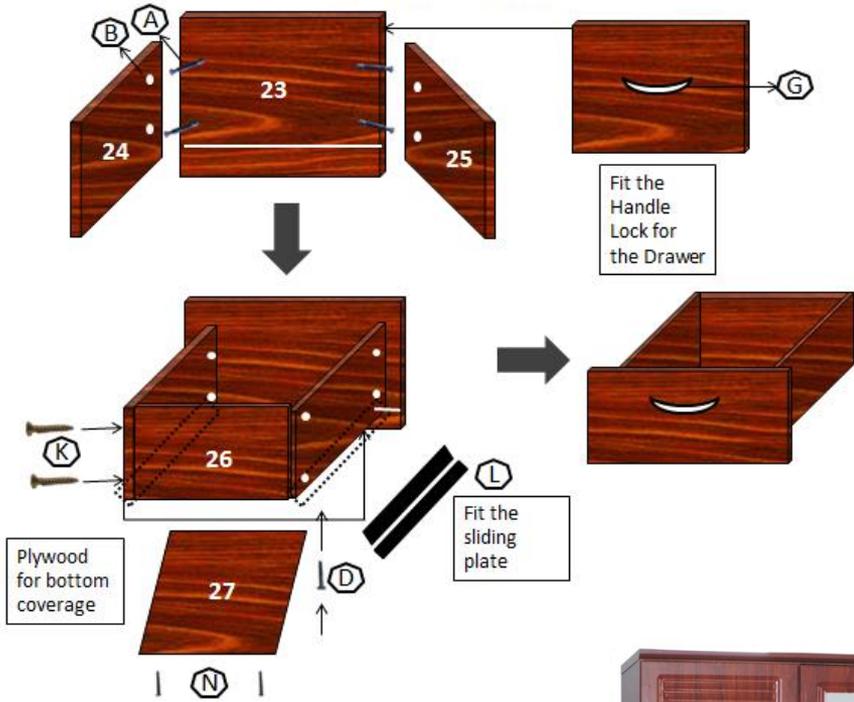

**Final Product  
NAD 9938**



 A 30	 B 30	
 C 2	 D 18	
 E 36	 F 2	
 G 5	 H 3	
 18mm Q 24	 I 13	 J 3
 P 1	 K 4	 L 2
 O 4	 M 22	 N 50

## ASSEMBLY INSTRUCTIONS

1. Fit the no1 with 2,3,4 & 5 using A and B screws.
2. Then fit no 6(fix guiding plate C using D) to previous assembly using E screws.
3. Then fix 7,8,9,10(fix guiding plate C & plastic holder F using D) as per drawing using A,B & E screws.
4. After fix 11,12,13 to previous assembly using E screws.
5. Then fix 14,15,16 (fix plastic holder F) to that using A,B & E screws.
6. Fix 17 to the top of the assembly using E screws. Then fix the plywood 18 for backside coverage using iron needles N. Fix J for lock support.
7. Then fix the handles(G), lockset(H) and hinges(I) for doors 19,20,21 & 22.
8. Fix 23(fix Handle G) with 24 and 25 using A & B screws. Then fix 26 to it using K screws. Then place the plywood 27 along with sliding plate L using M & N.