

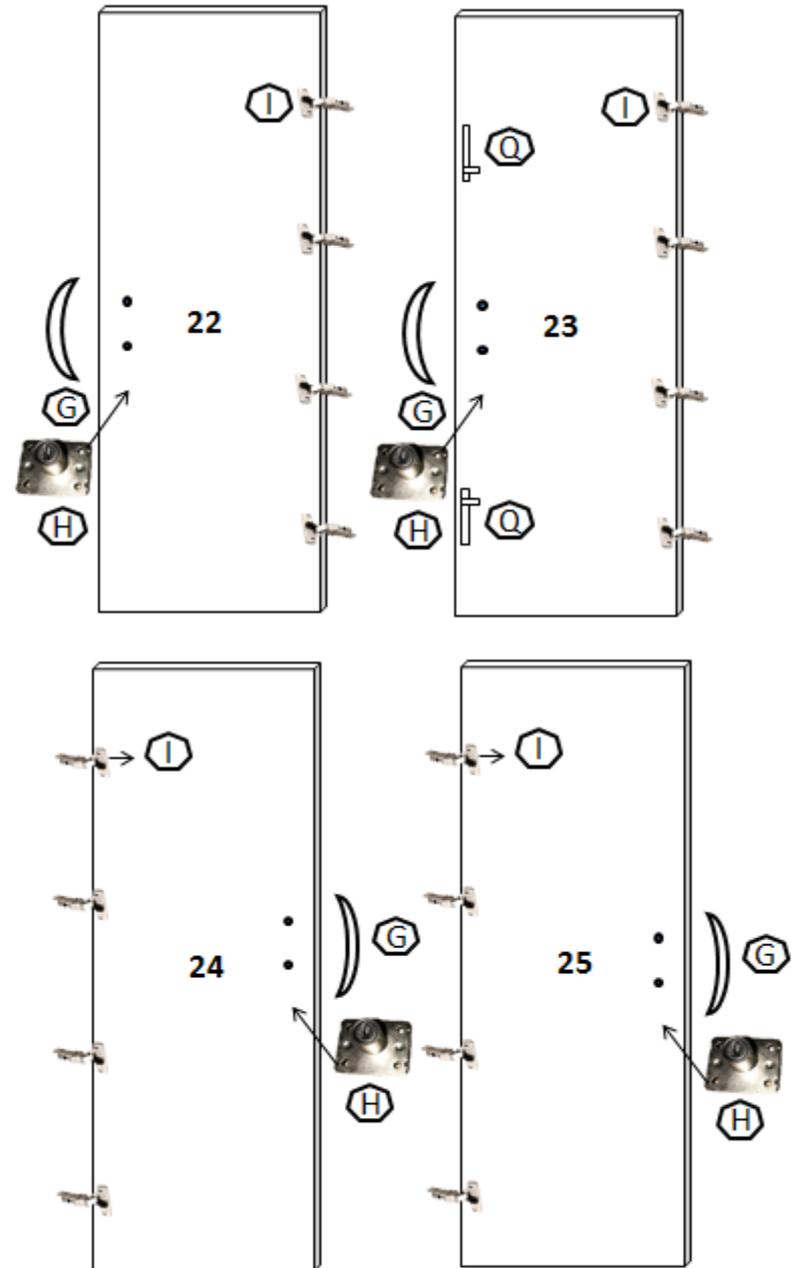


NAD FURNITURE

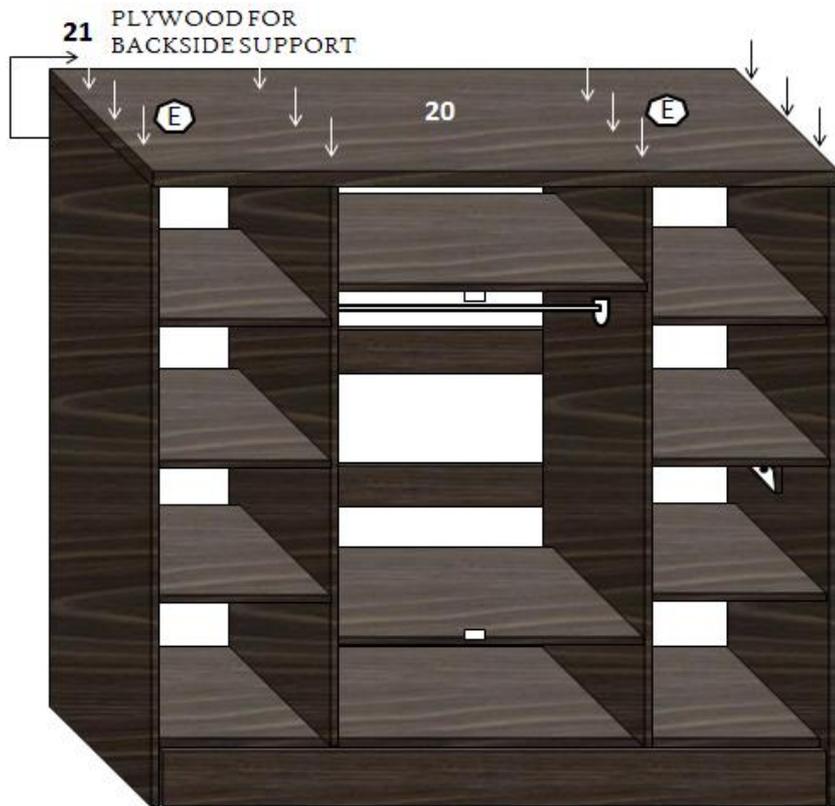


DRAWER ASSEMBLY

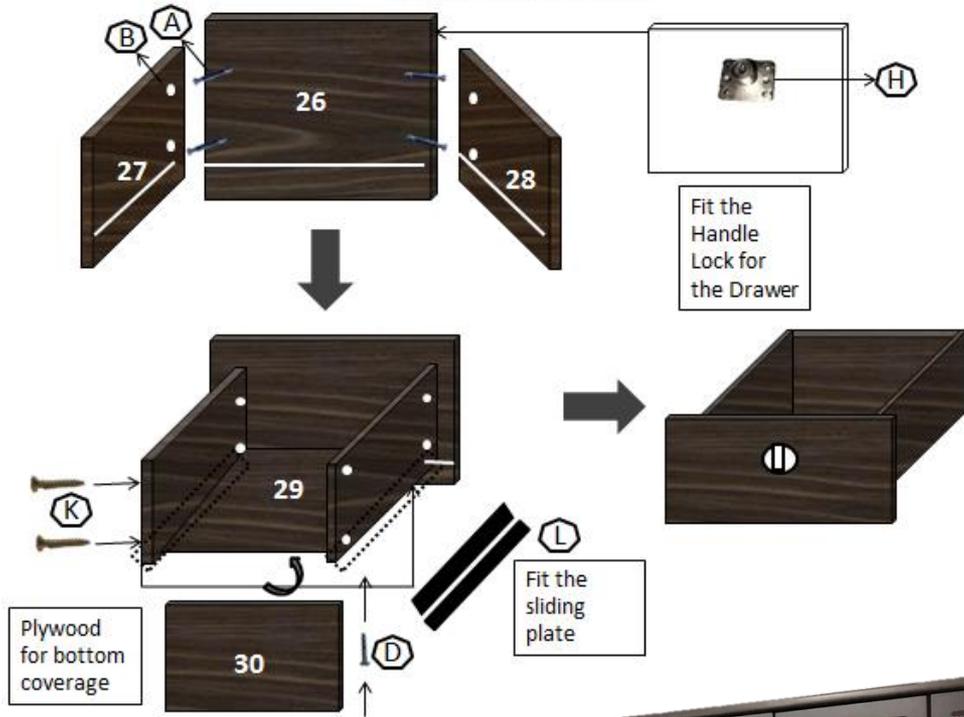

Final Product
NAD 9948



	 A 30	 B 30
	 C 2	 D 8
Footing RxL-4	 E 50	 F 2
 R 32	18mm  G 4	 H 4
 Q 2	 I 16	 J 5
 P 1	 K 4	 L 2
 O 2	 M 24	 N 50

ASSEMBLY INSTRUCTIONS

1. Fit the no1 with 2,3,4 & 5 using A and B screws.
2. Then fit no 6(fix guiding plate C using D) to previous assembly using E screws.
3. Then fix 7,8,9,10(fix guiding plate & plastic holder F C using D) as per drawing using A,B & E screws.
4. After fix 11,12,13 to previous assembly using E screws.
5. Then fix 14,15,16 (fix plastic holder F) to that using A,B & E screws.
6. Fix 17 to the top of the assembly using E screws. Then fix the plywood 18 for backside coverage using iron needles N. Fix J for lock support.
7. Then fix the handles(G), lockset(H) and hinges(I) for doors 19,20,21 & 22.
8. Fix 23(fix Handle G) with 24 and 25 using A & B screws. Then fix 26 to it using K screws. Then place the plywood 27 along with sliding plate L using M & N.